


FD 35218
Dec. ID 40110



UNITED STATES
DEPARTMENT OF THE INTERIOR
GEOLOGICAL SURVEY

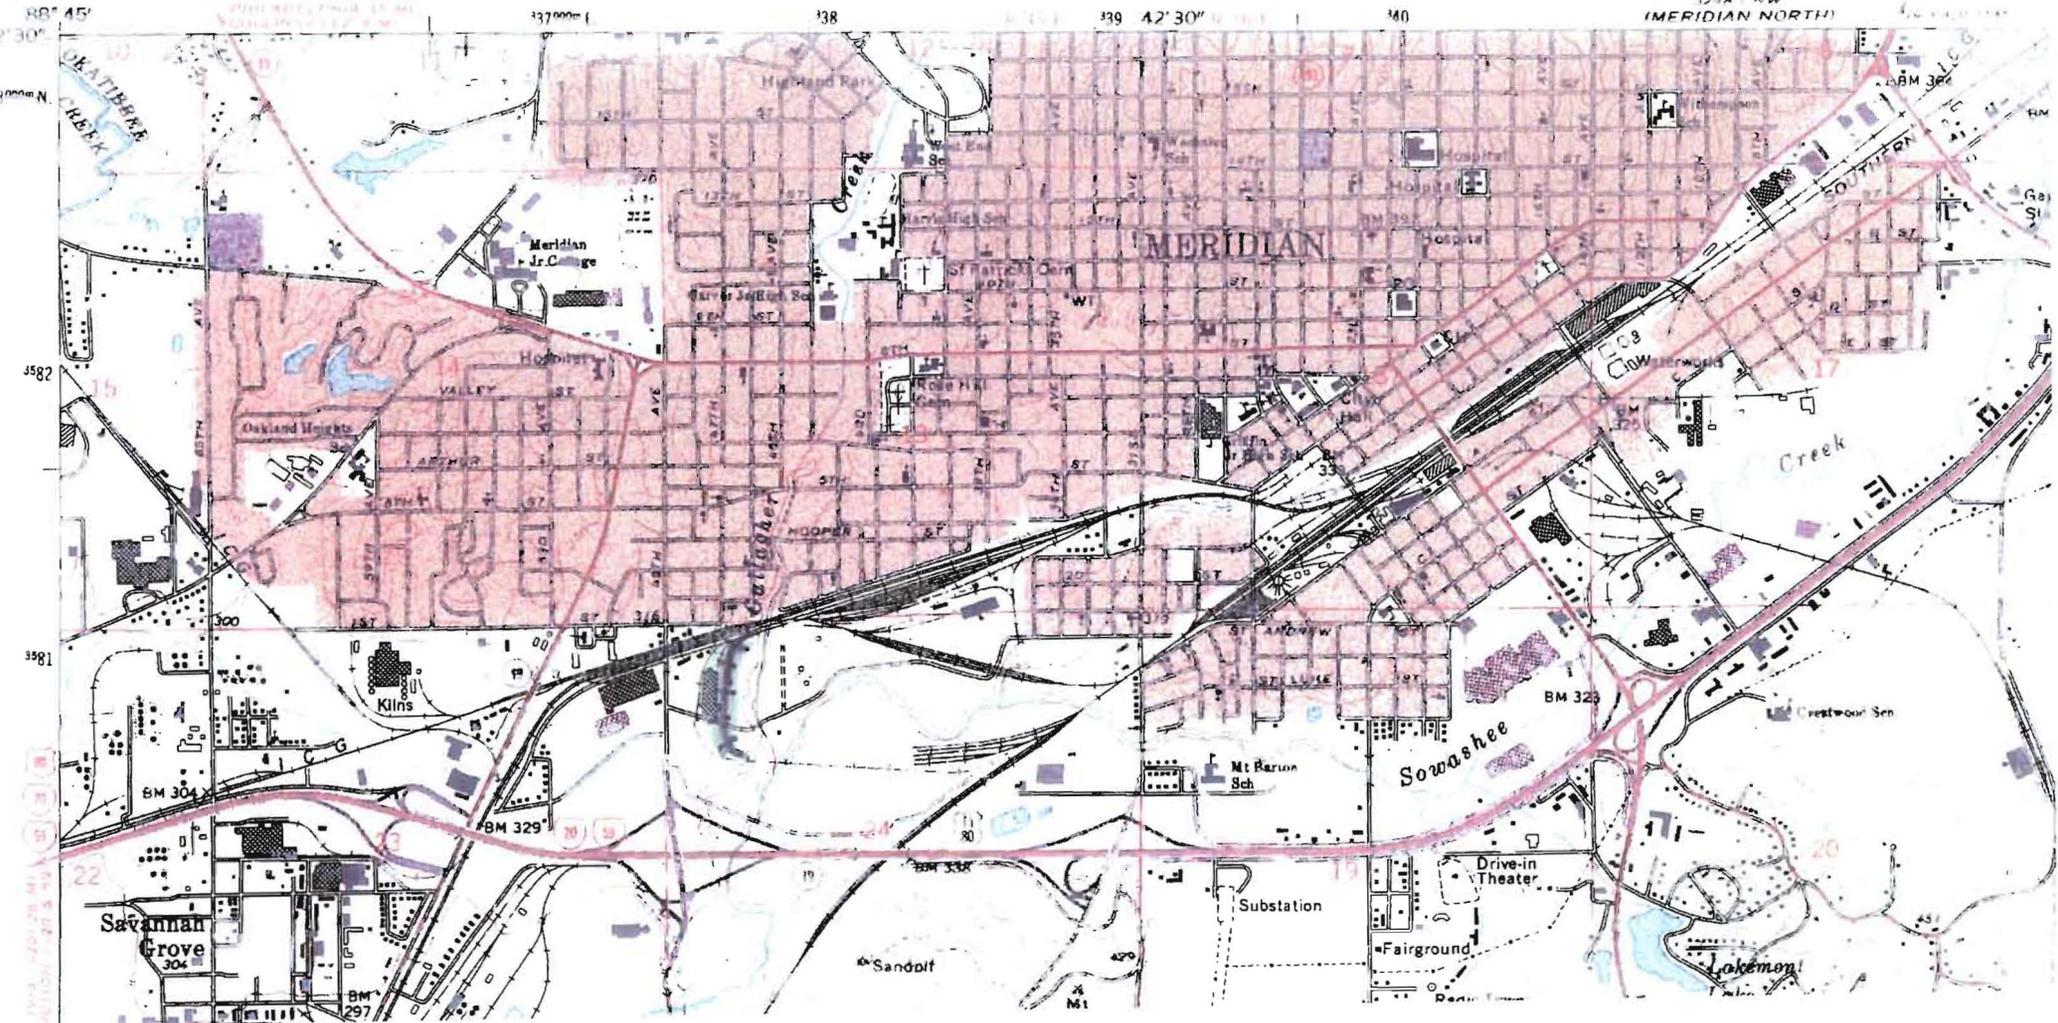

MAP KEY
SUBJECT LINE

FD 35218
Dec. ID 40110

VERTICAL ALIGNMENT TO BE DETERMINED

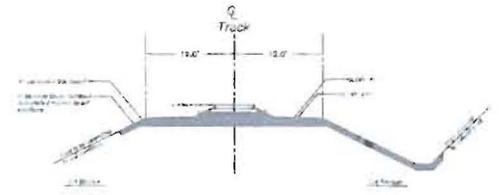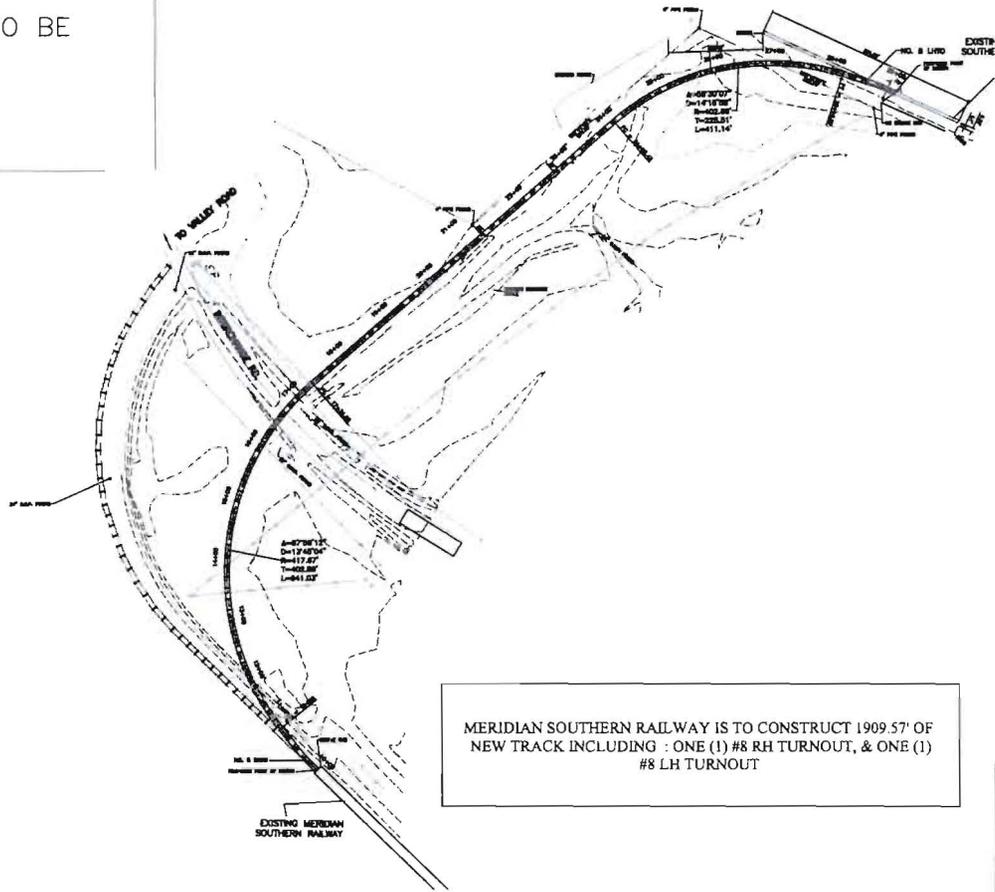

Typical Roadbed Section

CURVE DATA						
FL. ELEV.	SPIR.	Δ	DEGREE	RADIUS	TAN(EN)	LENGTH
	1	87°56'13"	117.48'	417.57'	402.89'	611.03'
	2	58°30'07"	114.1558'	402.66'	225.51'	411.34'

MERIDIAN SOUTHERN RAILWAY IS TO CONSTRUCT 1909.57' OF NEW TRACK INCLUDING : ONE (1) #8 RH TURNOUT, & ONE (1) #8 LH TURNOUT

PRELIMINARY PLAN
NOT FOR CONSTRUCTION

THIS DRAWING SUBMITTED FOR REVIEW BY MERIDIAN SOUTHERN RAILWAY



SCALE: 1" = 100'



PREPARED BY:
Engineering Plus
Planning • Surveying • Testing • Landscape Design
1724-B 23rd Ave. Meridian, Mississippi 38301 (601) 683-4234

PREPARED FOR:
MERIDIAN SOUTHERN RAILWAY, LLC
25 DELPHINE STREET, OWEGO, NY 13827 607-687-6992

MERIDIAN SOUTHERN RAILWAY- PROPOSED RAILWAY CONNECTION
MERIDIAN, MS

PROPOSED TRACK ADDITIONS AND MODIFICATIONS FOR
MERIDIAN SOUTHERN RAILWAY

JOB NO. **07-407**

DATE: 6-23-06 SHEET 1 OF 1
DRAWN BY: PG
SCALE: 1" = 100' DESI FILE: Lmdm14/07407/eng/PRC.dwg

FD 35218
Dec. ID 40110

APPENDIX A

FRA Grade Crossing Noise Model

FD 35218
Dec. ID 40110

FRA Grade Crossing Noise Model

User Input	
Noise Situation (Pick from List)	2
Horn Lmax (dBA) @ 100 feet	110
Horn Location on Locomotive(Pick from List)	2
Non Train Noise Environment (pick from list)	3
Shielding (Pick from List)	5
Length of Impact Area (pick from list)	2
Existing Train Speed (mph)	10
Future Train Speed (mph)	10
Number of Existing Trains in one Direction	0
Number of Future Trains in one Direction	2
Existing Number of Day Trains (7 am to 10 p.m.)	0
Future Number of Day Trains (7 am to 10 p.m.)	2
Existing Number of Night Trains (10 p.m. to 7 am)	0
Future Number of Night Trains (10 p.m. to 7 am)	0
Existing Average Number of Cars	11
Future Average Number of Cars	11
Existing Average Number of Locomotives	2
Future Average Number of Locomotives	2

Noise Situation	
Horns Existing and Future	1
Horns in Future Only	2
No Horns Existing and Future	3

Horn Location on Locomotive	
National Average (50% front, 50% middle)	1
All Front Mounted	2
All Middle Mounted	3
User Defined	4



Non Train Noise Environment	
Urban	1
Suburban	2
Rural	3
User Defined Ldn =	50 dBA

Shielding	
Dense Urban	1
Light Urban	2
Dense Suburban	3
Light Suburban	4
Rural	5
No Shielding	6

Length of Impact Area	
1/4 mile	1
20 seconds	2
15 seconds	3

Ldn 65 Contours Numeric Output (in feet)	
Existing 65 Ldn Contour at X-ing	0
Future 65 Ldn Contour at X-ing	127
Existing 65 Ldn Contour at 1/2 zone length	0
Future 65 Ldn Contour at 1/2 zone length	89
Zone Length	200
1/2 Zone Length	100

Impact Zones Numeric Output (in feet)	
Impact Distance at X-ing	510
Severe Impact Distance at X-ing	260
Impact Distance at 1/2 zone length	394
Severe Impact Distance at 1/2 zone length	193
Zone Length	200
1/2 Zone Length	100

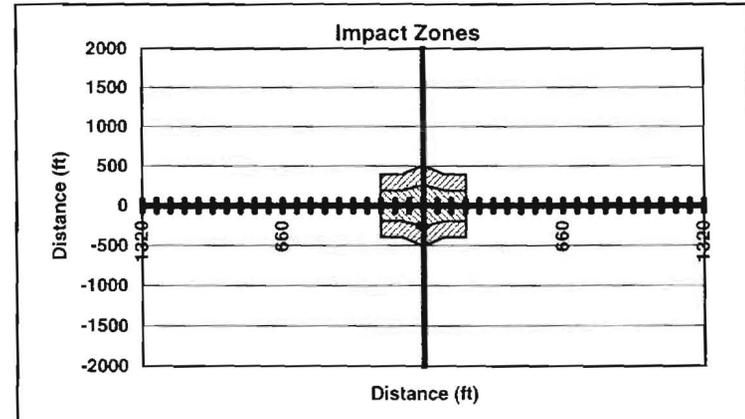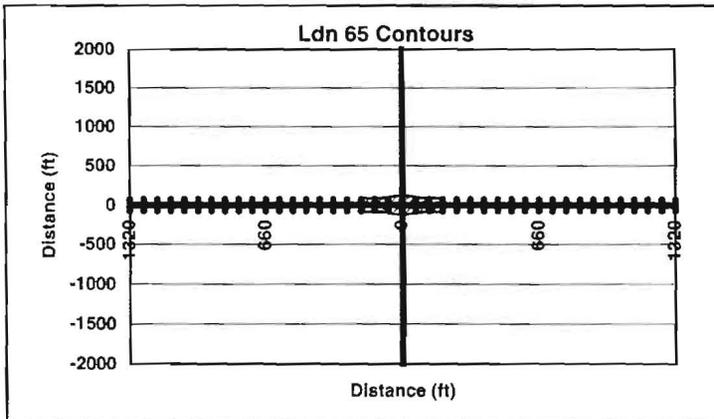

FD 35218
 DEC ID 40110

Instruction sheet for using the FRA horn noise model.

Cells in Blue are inputs.
Cells in Green are lookup tables.
Cells in Yellow are output.

Only cells in blue can be changed. The rest of the spreadsheet is locked and is not to be altered by the user. The four cells in dark blue can be changed, but they contain formulas critical to the operation of the spreadsheet. If they are changed, do not save the spreadsheet (or save it under a different name) or the formulas will be lost. Note that the spreadsheet may take a few seconds to update after any changes to the input (especially with slower computers).

1 Noise Situation: Use the lookup table to specify the horn sounding condition of interest.

2 Horn Lmax: The maximum A-weighted sound level of the train horn at 100 feet from the front of the train. If your Lmax is not at 100 feet, use the following converter to get the Lmax at 100 feet.

Your Lmax	110	dB
Your distance	100	feet
Lmax at 100 feet	110	dB

3 Horn Location on Locomotive: Use the lookup table to specify the location of the horns on the locomotives.

There are 4 options:

- 1 National average. Use this if the mix of horns is not known. It represents the national average of several thousand locomotives.
- 2 All front mounted: All the horns are located at the front of the locomotive.
- 3 All middle mounted: All the horns are mounted in the middle of the locomotive.
- 4 User defined percentage: If there is detailed knowledge about the horn location mix, use this and input the percentage of the front mounted horns in the blue input box in the lookup table.

4 Non Train Noise Environment: This represents the noise environment without any train noise (the background noise). Use the lookup table to determine the type of noise environment. A specific noise environment can be input, if the data is available. The values used for the non train noise environment are as follows:

Urban:	65	dB	Ldn
Suburban:	55	dB	Ldn
Rural:	45	dB	Ldn

5 Shielding: Use the lookup table to specify the type of shielding by the type of area where the grade crossing is located. Near grade crossings, shielding is generally provided by rows of buildings. Using no shielding is not recommended.

6 Length of Impact Area: This determines the length of the impact area along the tracks. The default is 1/4 mile. The 20 second and 15 second options calculate the distance based on the speed of the train, up to a maximum of 1/4 mile for higher speed trains.

7 Train Speed: The speed of the train, in miles per hour. There are separate entries for existing and future trains.

8 Existing and future numbers of Trains: Use this to input the number of trains at the crossing. You should input the number of trains in one direction only, do not sum both directions. The split between day and night trains assumes an even distribution over the entire 24 hours of the day. Night is considered to be 10 pm to 7 am and day is 7 am to 10 pm. The user can input specific numbers for the day and night trains in the dark blue boxes if the split is not uniform (for commuter rail systems, as an example), but do not save the spreadsheet (or save it as a different name) or the formulas in those boxes will be lost. If you do lose the formulas, the following are the formulas you should use in those four cells.

Cell C14: +C12*15/24
Cell C15: +C13*15/24
Cell C16: +C12*9/24
Cell C17: +C13*9/24

9 Number of Cars: Enter the average number of cars, for both the existing and future cases.

10 Number of Locomotives: Enter the average number of locomotives, for both the existing and future cases.

11 Numeric Output: These two tables give the numeric output of the program. All distances are in feet.

Ldn 65 Contours Numeric Output: The first two numbers represent the distance perpendicular to the tracks to the Ldn 65 contour at the crossing, for both the existing and future conditions. The next two numbers represent the distance perpendicular to the tracks to the Ldn 65 contour at the halfway point of the horn zone. The final two numbers represent the distances along the track that define the half and full impact zone lengths.

Impact Zones Numeric Output: The first two numbers represent the distance perpendicular to the tracks to impact and severe impact at the crossing. The next two numbers represent the distance perpendicular to the tracks to the impact and severe impact at the halfway point of the horn zone. The final two numbers represent the distances along the track that define the half and full impact zone lengths.

12 Graphs: The graphs provide a visual means of comparing changes in the input parameters. Both scales remain constant, so you can do relative comparisons.

The Ldn 65 graph shows the existing (in blue) and the future (in red) Ldn 65 contours for the data provided by the user.

The Impact graph shows the impact (in blue) and the severe impact (in red) for the data provided by the user.

FD 35218
DEC ID 40110